

## MB70 Software & Bootloader Update Procedure via USB

Please, follow the instructions.

There are two steps generally;

- Bootloader (CFE) update **(It is not usually necessary for re-flashing)**
- Firmware update

### Step1: Bootloader update process:

- 1- Copy content of “cfe\_update” files in to the USB disk root.
  - 1a. there are 2 boot files, please do not put them in any folder.
  - 1b. file names must be ‘**cfe-VSTL.bin**’ and ‘**sysinit.txt**’, please check their names.
- 2- Insert USB disk, then turn on TV by the **P+** button by the remote controller. Wait for 30 seconds.

This will update bootloader, but TV will not initialize. (LED will continue to blink)  
After update completed, eject USB disk and turn the TV to stand-by mode.

### Step2: Firmware update process:

- 3- Format USB flash memory. Copy the content of main SW (.rar) folder into USB disk root.
  - 3a. There are approximately 19 or 24 files, it depends on model. Please do not put them in any folder.
- 4- Insert USB disk, and then turn on TV by the **P+** button by the remote controller.

LED will blink, when firmware is being loaded.  
This may take a few minutes.  
After software update completed, TV will initialize itself.
- 5- You can check service menu to see updated software version.  
(For service menu; 1)Menu → 2)press ‘4, 7, 2, 5’ digits on the remote controller)